

UFO High Bay

INSTRUCTION MANUAL

- Thank you for purchasing our UFO Highbay. Please read the below articles carefully to see how to use this product safely.
- Warning contents and attention contents related to product safety use, please be sure to follow it.

Warning

- This UFO High bay within the input voltage range:120-277VAC,50/60Hz.
- If input voltage exceeds this range, it may cause light failure. Please be sure to operate under correct input voltage.
- Ensure ambient operating temperature of -40°F(-40°C) through 122°F(50°C).
- Using this UFO High bay in temperatures outside of this range will reduce the UFO High bay lifespan.
- Make sure to turn off power before starting the installation process.


Attention

- IP rating: IP65, can work under wet locations.
- Please keep the UFO High bay away from any corrosive substance. When you clean it, please use damp or dry cloth.


Input Voltage	AC120-277V			
Frequency	50/60HZ			
Power	100W/125W/150W	100W/150W/200W	150W/200W/240W	300W
Input Current	0.92A/1.15A/1.38A	0.92A/1.38A/1.83A	1.38A/1.83A/2.2A	3.3A
CCT	30K;40K;50K			

Installation Instruction


1. Rings type:

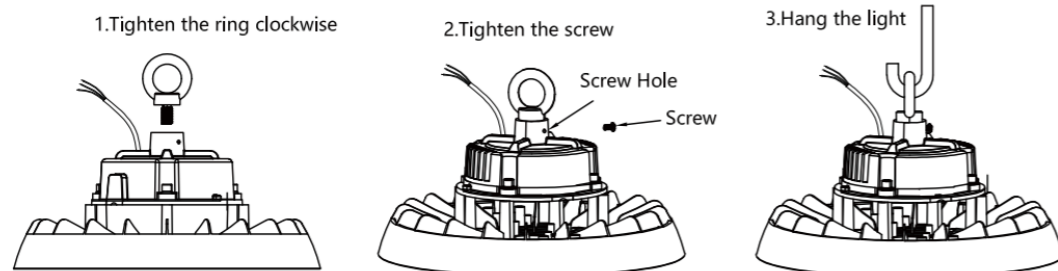

2. Hook type:

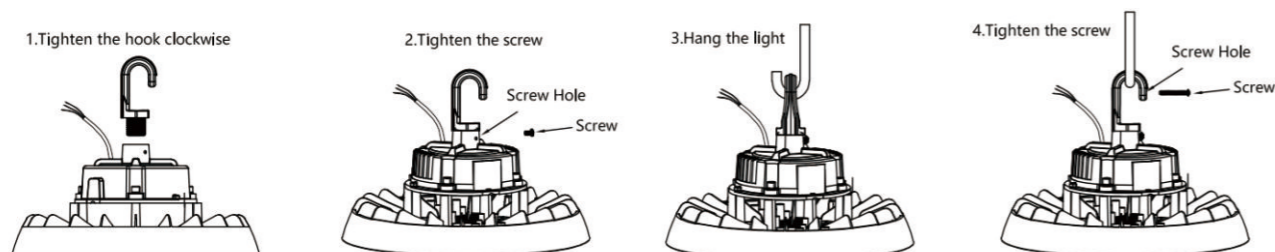


Product Dimension

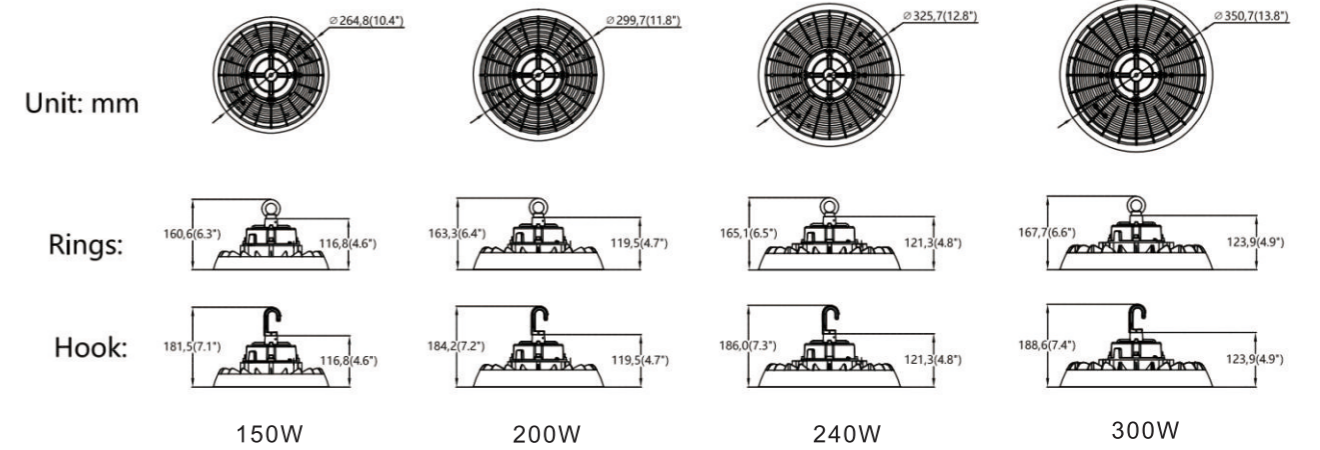


Watts selected Operation Manual:

A/B/C (Minimum / Middle / Maximum wattage)

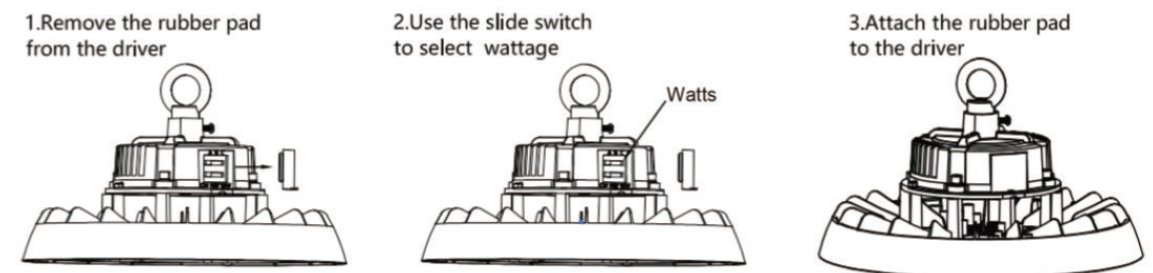


Wiring Connection

Turn off the power, connect AC wire. black wire to L, white wire to N, and green wire to E. Connect wires as below, Purple wire is DIM+, Pink wire is DIM-, Black/White wire is 12V+

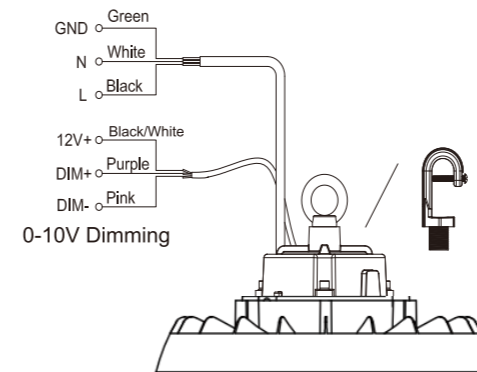


Twist in sensor installation manual

1. Take out cover cap.
2. Twist in sensor.

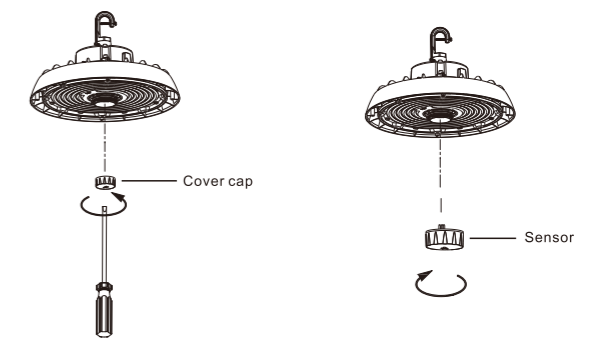

3. Finished installation.

 Wiring Diagram



Tip: The above content is for reference only, please take the real thing as the criterion.

The Installation must be carried out by a qualified electrician.